

PAC

OEM-1

Interfacing Information Bulletin Number 5

June 5, 1998


Vehicles: 1998 Jeep Grand Cherokee and other late model Chrysler vehicles.

Product: OEM-1, ADD-CHR and AMP-RCA cables

Symptom: Due to limited space around and behind radio installation may be difficult

Correction: Plug the ADD-CHR cable into the vehicle harness first and route the plug that connects to the interface box up through the radio cavity. The OEM-1 and the AMP-RCA already plugged in, can then be plugged in and remain above the radio between the radio cavity and dash pad. Route the RCA cables and the amplifier trigger down between the radio and instrument cluster and out the bottom of the dash.

Reconnect the factory radio and mount.

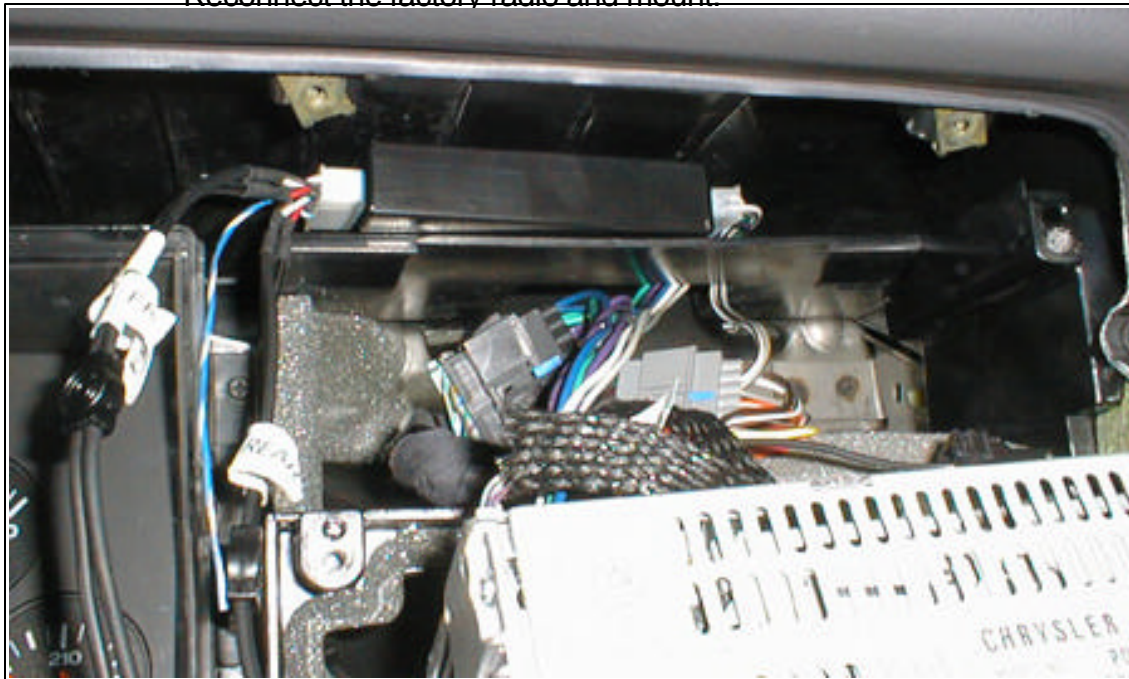

Pacific Accessory Corporation
Voice: 800-854-3133 714-835-3022

Santa Ana, CA 92705
Fax: 800-832-9722 714-835-3233